

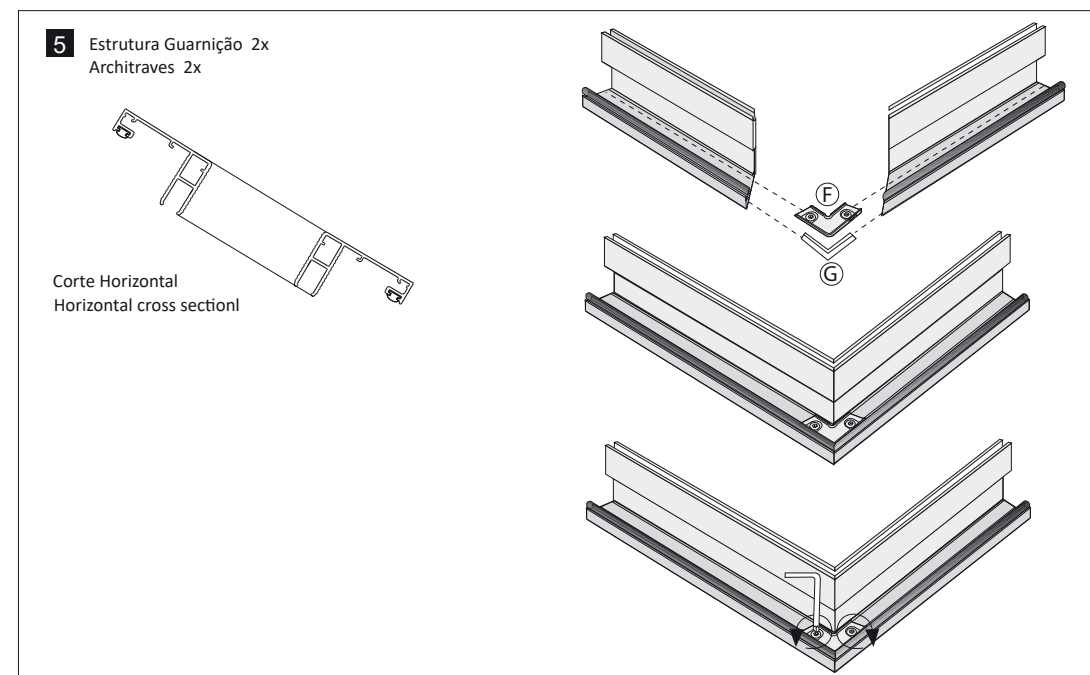
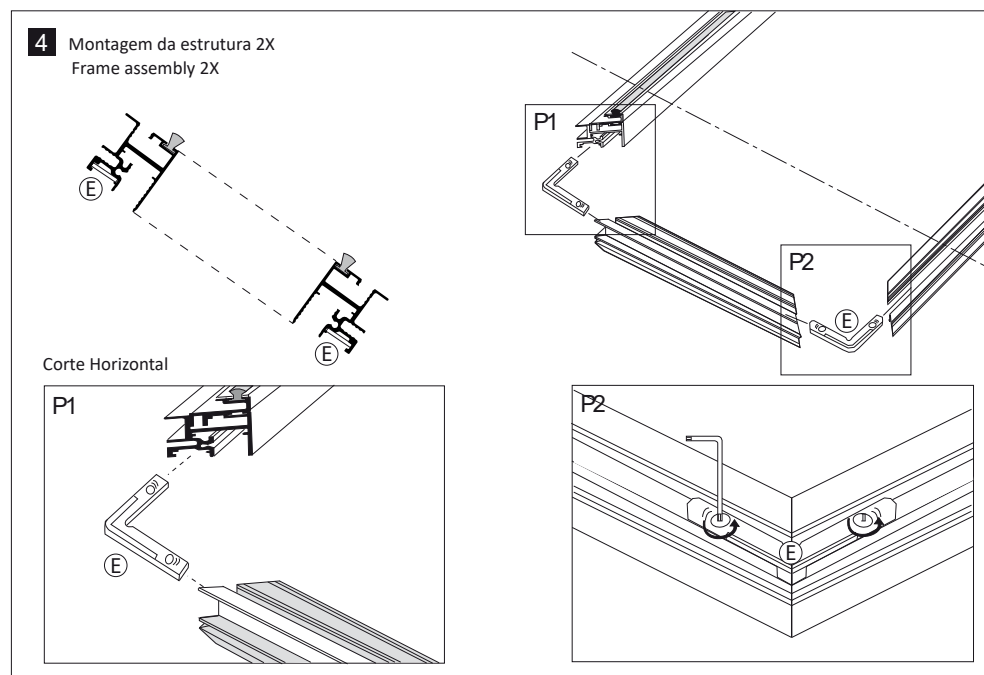
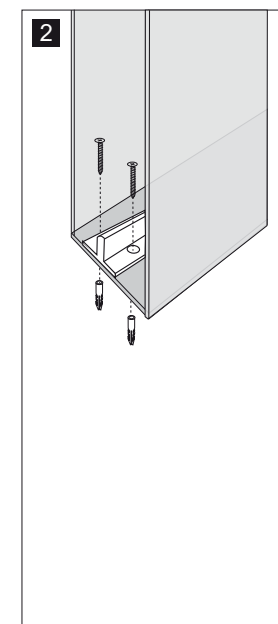


GUARNIÇÕES TAPETAS CONTRE-CHAMBRANLES ARCHITRAVES	CAIXILHO 70 ARMAZÓN 70 POCKET FRAME 70 CAISSON 70	CAIXILHO 90 ARMAZÓN 90 POCKET FRAME 90 CAISSON 90
	MIN MAX	MIN MAX
30	96 120	116 140
50	140 160	160 180
70	180 200	200 220
90	220 240	240 260
110	260 280	280 300
130	300 320	320 340
150	340 360	360 380
170*	380 400	400 420

* Disponível apenas com guarnições de 50 mm
Disponible sólo con tapetas de 50 mm
Available only for 50 mm architraves
Disponible seulement pour des contre-chambranles de 50 mm

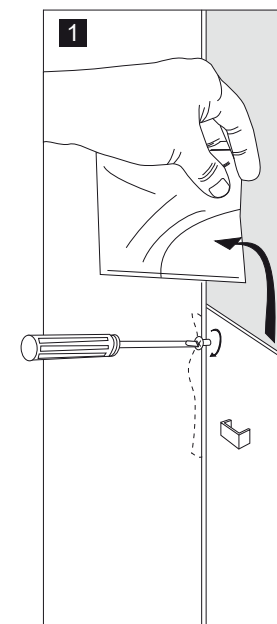


6

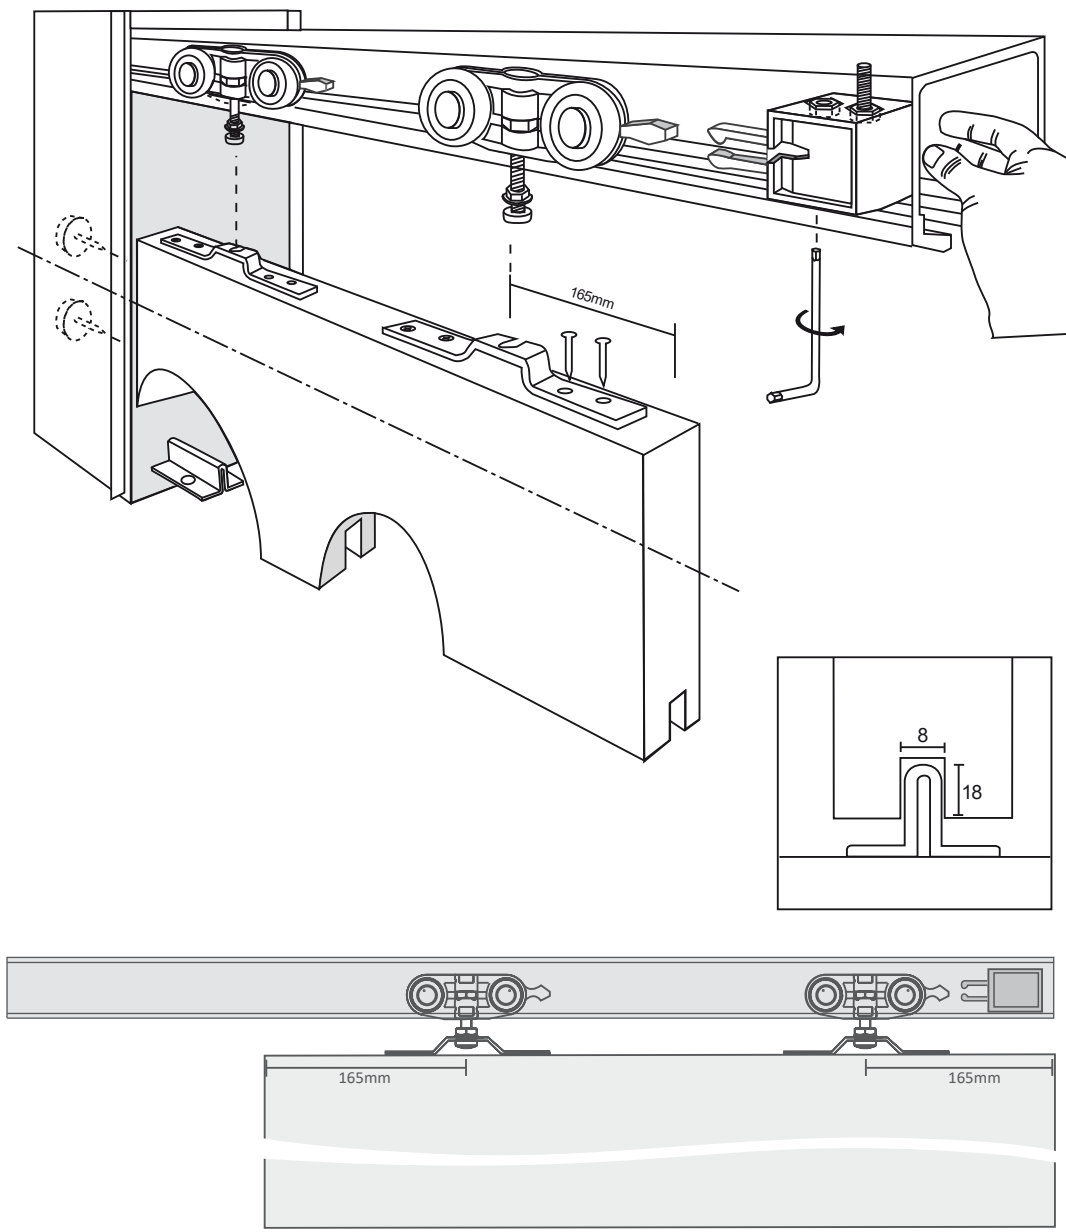


7

Fixar o perfil **A** com os parafusos **H**
Fasten profile **A** with screws **H**

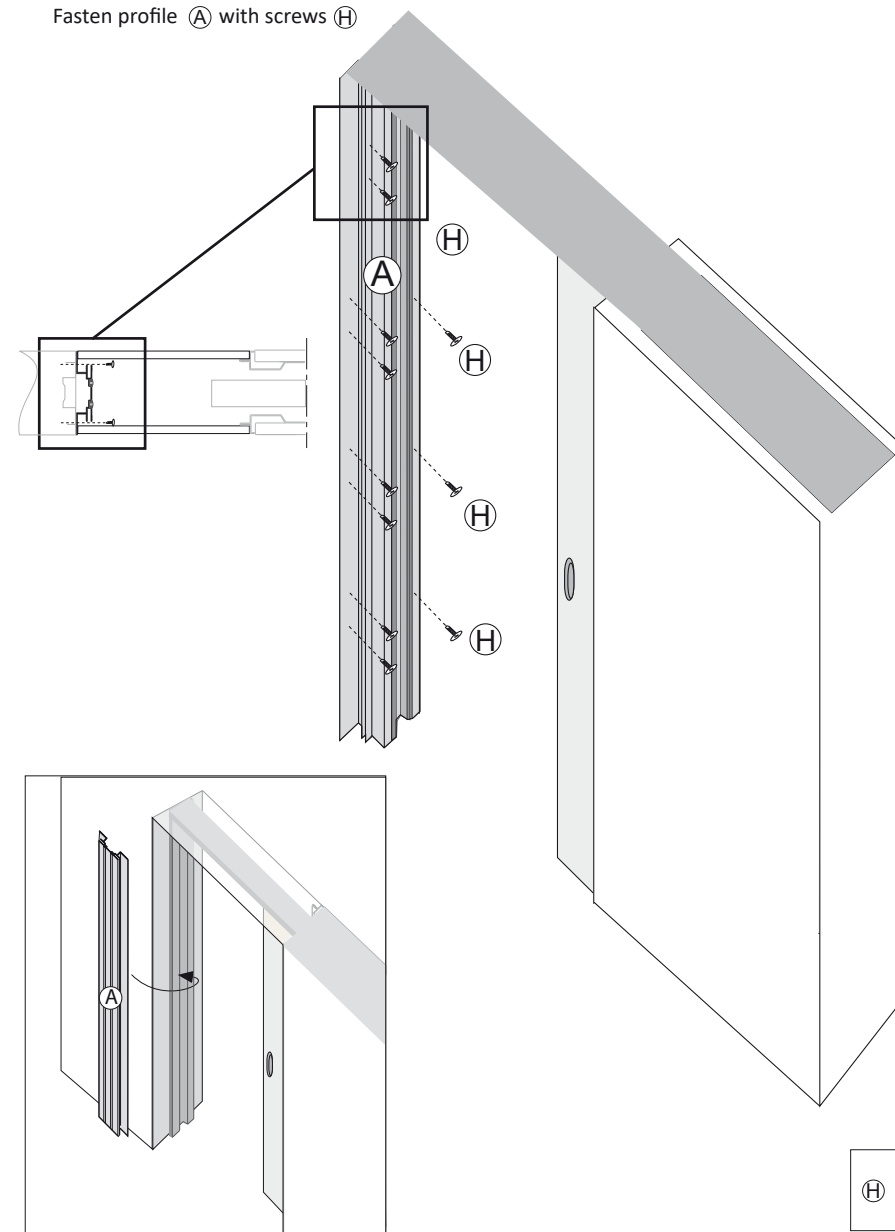

- 8** Fixação das estruturas montadas na figura 4 com os parafusos ① e ②
Fix the preassembled structure (Image 4) with screws ① e ②

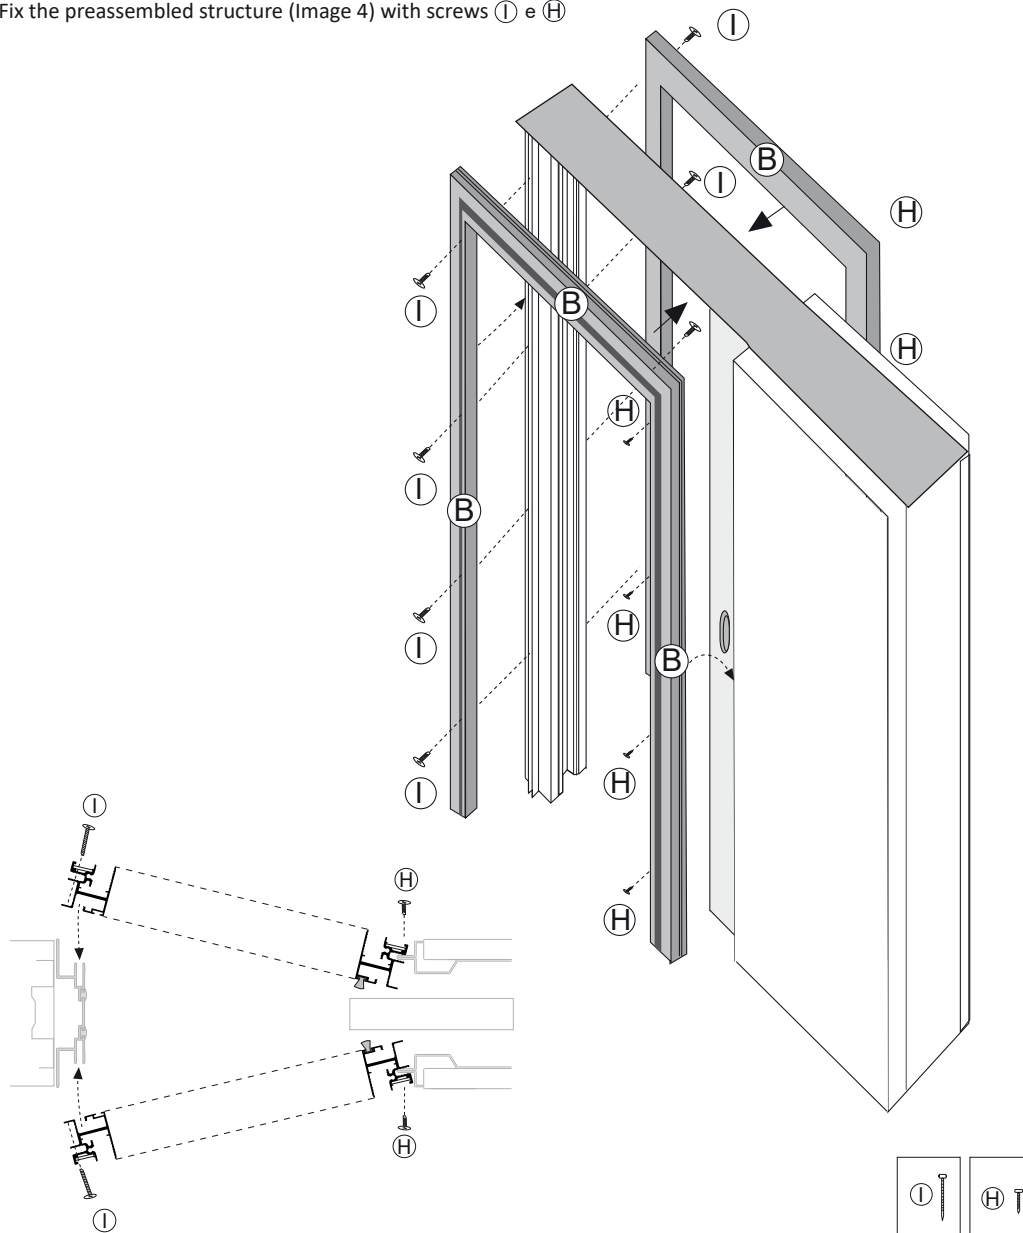

- 9** Fixar a guarnição na estrutura (Image 5)
Fix the preassembled Architraves (Image 5)

